


Basic Diagnostics

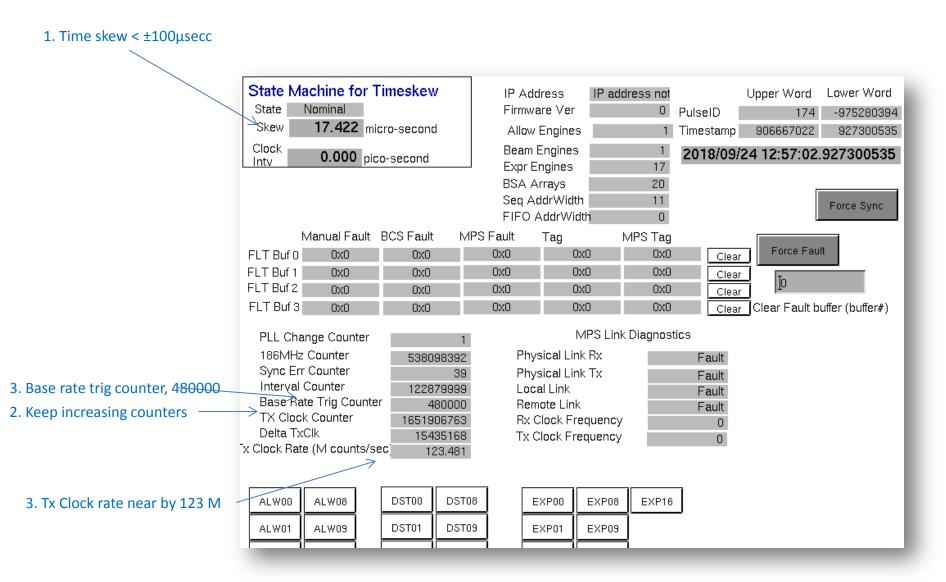

 
Rate Measurement (RM)


2. Choose Fixed Rate 1. Choose one of Rate Measurement (RM) System

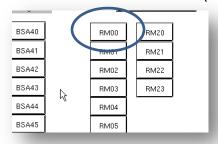

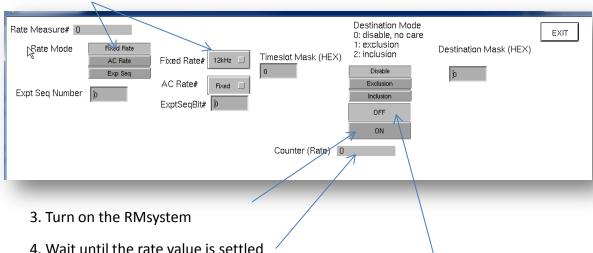

4. Wait until the rate value is settled



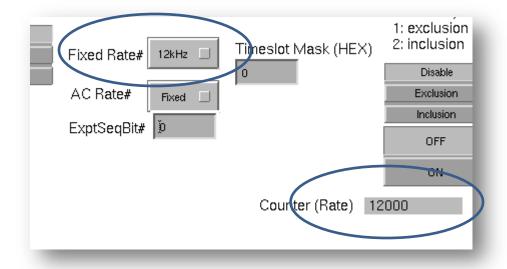

6. The measured rate should be matched with the fixed rate selector